


CANON MOTOR DRIVE SYSTEM CHART

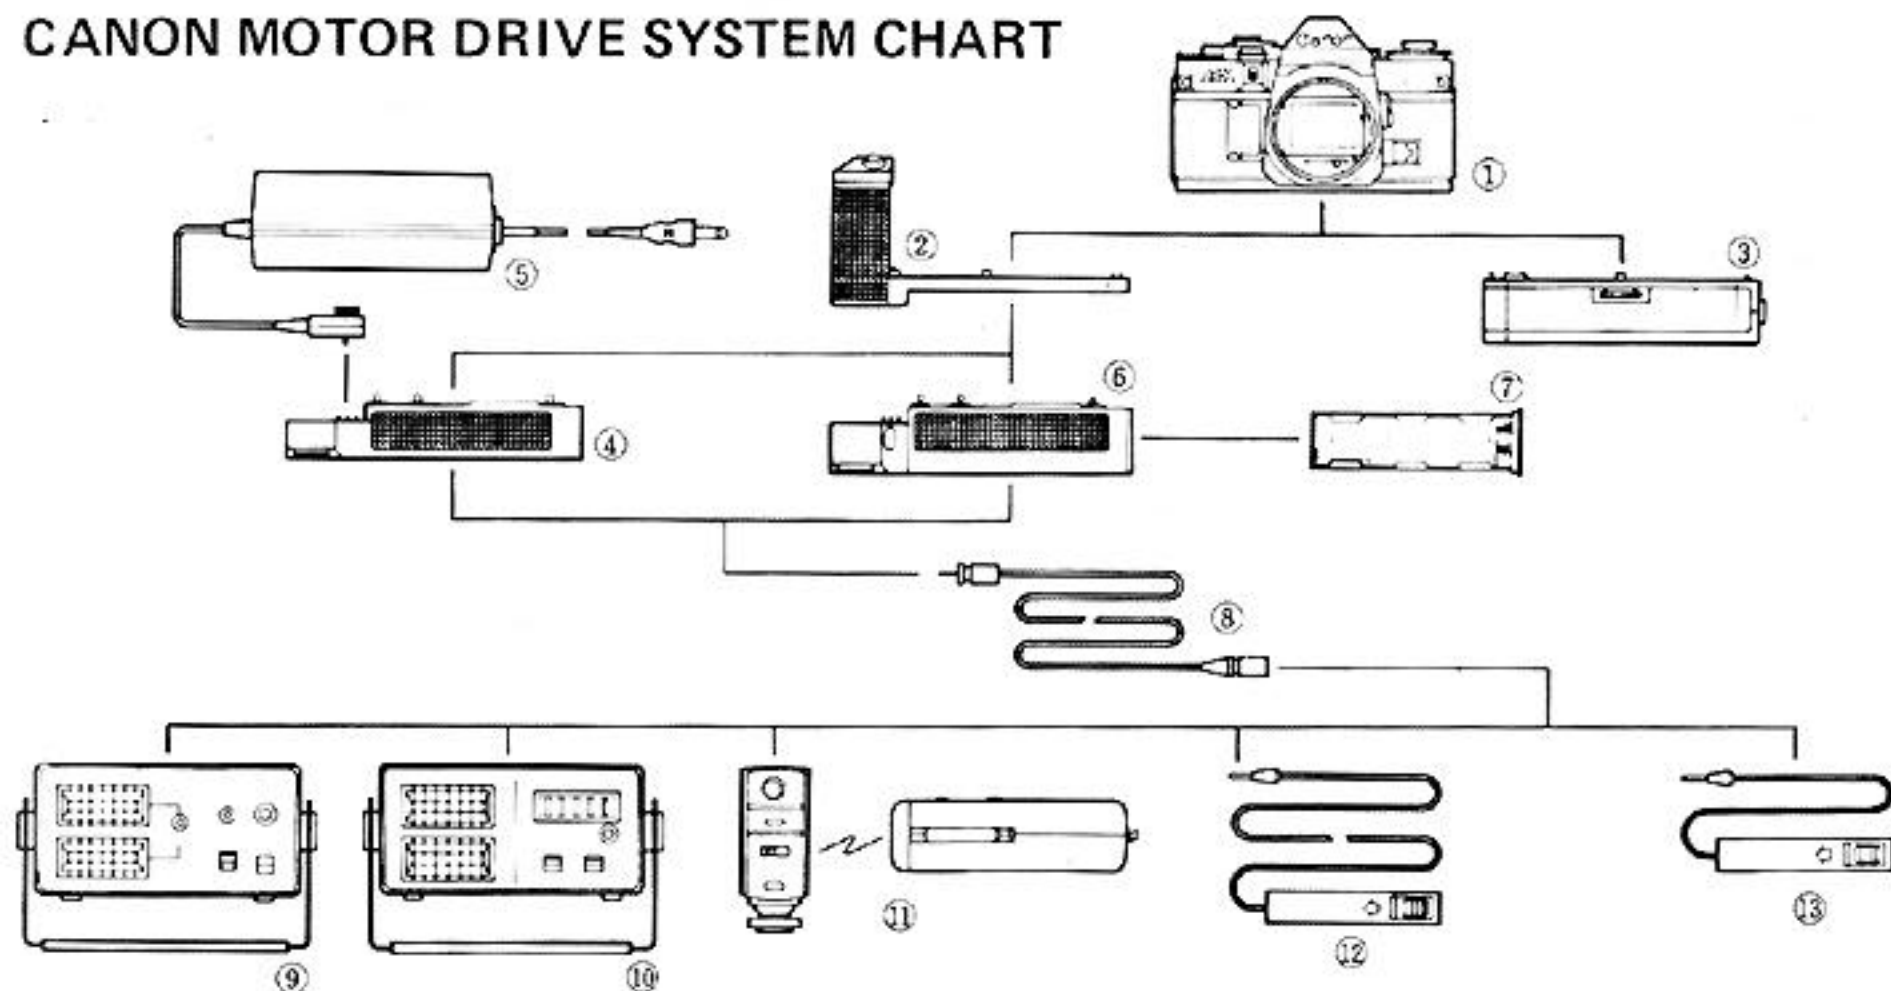

- | | | |
|--------------------|--------------------------------|--------------------------------|
| ① Canon A-1 | ⑥ Battery Pack MA | ⑩ Time Lapse Programmer B-Unit |
| ② Motor Drive MA | ⑦ Battery Magazine MA | ⑪ Wireless Controller LC-1 |
| ③ Power Winder A | ⑧ Extension Cord E1000 | ⑫ Remote Switch 3 |
| ④ Ni-Cd Pack MA | ⑨ Time Lapse Programmer A-Unit | ⑬ Remote Switch 60 |
| ⑤ Ni-Cd Charger MA | | |